

Compatible Camera Models

Model: | [SS-1](#)



SS-1 Suitable for external zoom lens compact digital camera.

Over 1000 camera models can be fitted

(updated at 15 May 2014)

Agfa

1, 100, 102, 103, 104, 105, 505x, 1338mT, 1438m, 2030m, 2338mT, DC-70, DC-F350, DC-W80, DC733i, DC733s, DC830i, DC833m

Aigo

F100, F200, F350, P1, T30, T35, T60, T70, *T1000, T1028, T1068, T1200, T1258, T1260, T1428, T1458, V68, V80, V500, V630, V700, V720, V728, V740, V760, V780, V800, V830, V860, V866, V880, V890, V1000, V1018, V1080, W148

BenQ

C520, C530, C630, C750, C850, C1020, C1060, C1220, C1230, C1250, C1255, C1460, E510, E520, E605, E720, E800, E820, E1000, E1020, E1030, E1035, E1040, E1050, E1050t, E1220, E1230, E1240, E1250, E1260, L1020, L1050, T700, T800, T850, T1260, X600, X710, X720, X725, X835, W1220

Canon

A810, A2200, A2300, A2400IS, A2500, A2600, A3000, A3000IS, A3100, A3100IS, A3200IS, A3300, A3400IS, A3500IS, A4000IS, IXUS30, IXUS40, IXUS50, IXUS55, IXUS60, IXUS65, IXUS70, IXUS75, IXUS80 IS, IXUS85IS, IXUS90IS, IXUS95IS, IXUS100IS, IXUS105, IXUS105IS, IXUS110IS, IXUS115HS, IXUS120IS, IXUS125HS, IXUS130, IXUS132, IXUS135, IXUS140, IXUS145, IXUS150, IXUS155, IXUS200IS, IXUS210, IXUS220HS, IXUS225HS, IXUS230HS, IXUS240HS, IXUS245HS, IXUS255HS, IXUS400, IXUS430, IXUS500, IXUS500HS, IXUS510HS, IXUS700, IXUS750, *IXUS800IS, IXUS850IS, IXUS860IS, IXUS870IS, IXUS900TI, *IXUS950IS, IXUS960IS, *IXUS970IS, IXUS980IS, IXUS990IS, IXUS1100HS, IXUS i, IXUS i5, IXUS i7, IXUS iZoom, IXUS i7 Zoom, IXUS IIs, IXUS

II, IXUS Wireless, IXUS V3, IXY1, IXY3, IXY10, IXY10S, IXY20IS, IXY25IS, IXY30, IXY30a, IXY40, IXY50, IXY55, IXY60, IXY70, IXY80, IXY90, IXY90F, IXY95IS, IXY110F, IXY110IS, IXY120, IXY140, IXY200, IXY200a, IXY200F, IXY210F, IXY220F, IXY210IS, IXY220IS, IXY320, IXY400, IXY400F, IXY 410F, IXY420F, IXY430F, IXY450, IXY500, IXY510IS, IXY600, IXY600F, IXY610F, IXY700, IXY800IS, *IXY810IS, IXY820IS, IXY830IS, IXY900IS, IXY910IS, IXY920IS, IXY930IS, IXY1000, IXY2000IS, IXY3000IS, IXY L, IXY L2, IXY L3, IXY L4, IXY Wireless, SD10, SD20, SD30, SD40, SD100, SD110, SD200, SD300, SD400, SD430, SD450, SD500, SD550, SD600, SD630, SD700IS, SD750, SD770IS, SD780IS, SD790IS, SD800IS, *SD850IS, SD870IS, SD880IS, *SD890IS, SD900, SD940IS, SD950IS, SD960IS, SD970IS, SD980IS, SD990IS, SD1000, SD1100IS, SD1200IS, SD1300IS, SD1400IS, SD3500IS, S95, S230, S100, S110, S400, S410, S500

Casio

EX-JE10, EX-N1/EX-N10, EX-N5, EX-N20, EX-Z28, EX-Z770, EX-ZS6, EX-Z690, EX-Z3000, EX-ZS12, EX-ZS15, EX-ZS20, EX-ZS25, EX-ZS26, EX-ZS30, EX-ZS35, EX-ZR20, FC100, FC150, FC160S, QV-R300, S5, S6, S7, S8, S10, S12, S100, S500, S600, S770, S880, Z1, Z2, Z3, Z4, Z5, Z6, Z7, Z8, Z9, Z10, Z11, Z19, Z20, Z25, Z27, Z29, Z30, Z33, Z35, Z37, Z40, Z50, Z55, Z57, Z60, Z65, Z70, Z75, Z76, Z77, Z80, Z85, Z88, Z90, Z100, Z110, Z120, Z150, Z200, Z250, Z270, Z280, Z300, Z330, Z350, Z370, Z400, Z450, Z500, Z550, Z600, Z670, Z680, Z700, Z750, Z800, Z850, Z1000, Z1050, Z1080, Z1200, Z1200SR, Z3000, ZS5, ZS10

Fujifilm

A100, A150, A170, A175, A180, A220, A225, A400, A500, AV100, AV105, AV110, AV120, AV130, AV150, AV180, AV200, AV205, AV230, AV235, AV250, AV255, AV280, AV285, AX200, AX205, AX245W, AX250, AX280, AX300, AX305, AX330, AX335, AX350, AX355, AX380, AX385, F10, F11, F20, F30, F31fd, F40fd, F47fd, F50fd, F60fd, F70EXR, F80EXR, F85EXR, F75, F85, F200EXR, F455, F460, F470, F480, F100fd, F200, J10, J20, J25, J26, J27, J30, J32, J35, J37, J38, J50, J100, J120, J210, J250, JV100, JV105, JV110, JV150, JV160, JV170, JV200, JV205, JV250, JV255, JX200, JX205, JX210, JX250, JX255, JX280, JX300, JX305, JX350, JX355, JX370, JX400, JX405, JX420, JX500, JX530, JX700, JZ100,

JZ200, JZ300, JZ305, JZ310, JZ500, JZ505,
JZ510, JZ700, J15fd, J110W, J150W, T200,
T205, T300, T305, T500, V10

GE

A830, A835, A950, A1030, A1035, A1050,
A1150, A1200, A1230, A1235, A1250, A1255,
A1455, A1456W, C1033, C1233, C1440W,
E840S, E850, E1040, E1050, E1050W,
E1055W, E1240, E1250W, E1250TW, E1255,
E1255W, E1410SW, E1450W, E1480W,
E1486TW, E1680W, J1050, J1250, J1455,
J1458W, J1470S

Haier

A21, G20, G30, L90, L1080, MA5B, S40, S50,
S52, S61, S66, T70, V80, V1080, V1082,
V1280T, X80, X90

Hitachi

HDC-502, HDC-507, HDC-509, HDC-632, HDC-
841, HDC-1231, HDC-1241, HDC-1471

Kodak

C140, C142, C160, C180, C182, C190, C763,
C913, C1013, M200, M320, M340, M341,
M380, M420, M530, M550, M575, M590, M753,
M763IS, M853, M863IS, M873, M883, M893 IS,
M1033, M1063 IS, M1073IS, M1093IS, M2008,
MD30, Touch, V550, V603, V1073, V1273,
V530 Zoom, V550 Zoom

Leica

*C-LUX 1, *C-LUX 2, *C-LUX 3

Nikon

L2, L3, L6, L10, L11, L12, L14, L15, L16, L18,
L19, L20, L21, L22, L23, L26, L27, L28, S70,
S200, S210, S220, S230, S500, S510, S520,
S550, S560, S570, S600, S610, S610C, S620,
S630, S640, S700, S710, S2500, S2600,
S2700, S2800, S3000, S3100, S3200, S3300,
S3400, S3500, S3600, S4000, S4100, S4150,
S4200, S4300, S4400, S5100, S5200, S5300,
S6000, S6150, S6100, S6200, S6300, S6400,
S6700

Olympus

FE20, FE25, FE26, FE35, FE45, FE46, FE47, FE130, FE140, FE150, FE160, FE180, FE190, FE200, FE220, FE220D, FE230, FE240, FE250, FE280, FE290, FE300, FE320, FE330, FE340, FE350, FE350 Wide, FE360, FE370, FE3000, FE3010, FE4000, FE4010, FE4020, FE4030, FE4040, FE4050, FE5000, FE5010, FE5020, FE5030, FE5050, FE5500, μ 700, μ 710, μ 740, μ 750, μ 760, μ 780, μ 810, μ 820, μ 830, μ 840, μ 1000, μ 1010, μ 1020, μ 1200, μ 1060, μ 5000, μ 5010, μ 7000, μ 7010, μ 7020, μ 7030, μ 7040, μ 7050, VG-110, VG-120, VG-130, VG-140, VG-145, VG-160, *VG-180, X600, X905, X915, X940

Panasonic

F5, *F516, *FH1, *FH2, *FH3, FH4, *FH5, FH6, *FH-7, FH8, FH10, *FH20, *FH22, *FH25, *FH27, *FS1, *FS2, *FS3, *FS5, *FS6, *FS7, *FS10, *FS11, *FS12, *FS15, *FS18, *FS20, *FS25, *FS30, *FS33, *FS42, *FS62, *FX01, *FX2, *FX3, *FX07, *FX7, *FX8, *FX9, *FX10, *FX12, *FX30, *FX33, *FX35, *FX36, *FX37, *FX38, *FX40, *FX48, *FX68, *FX50, *FX55, *FX60, *FX65, *FX66, *FX77, *FX78, FX80, *FX100, *FX150, *FX180, *FX500, *FX520, *FX550, *FX580, L5, *LS85, S1, S2, S3, SZ1, SZ3, SZ7, SZ9, XS1, XS3, *ZR1, *ZR3, *ZX1, *ZX3

Pentax

50, A10, A20, A30, A36, A40, E40, E50, E70, E85, E75, E60, E65, E70L, E90, H90, L20, L36, L50, M10, M20, M30, M40, M50, M60, M85, M90, P70, P80, RS1000, RS1500, S, S5i, S5n, S5z, S1, S4, S4i, S6, S7, S10, S12, S30, S40, S45, S50, S55, S60, T10, T20, T30, V10, V20, SV, Svi, Z10

Polaroid

i737, i834, i835, i836, i1035, i1037, i1237, i1437, T830, T1455

Praktica

5203, 6105 ,6403, 6503, 7103, 7203, 7303, 8203, 8213, 8303, 8403, 8503, 4-Z50S, 14-Z5, 14-04, 12-Z5, 12-Z4, 12-XS, 12-TS, 12-23, 12-04, 12-03, 10-XS, 12-Z4TS, 10-X3, 10-TS, 10-23, 10-03, DC 60, DCZ 5.8, DCZ 6.8, DCZ 7.2, DCZ 7.3, DCZ 7.4, DCZ 8.2, DCZ 8.3, DCZ 10.3, DCZ 10.4, DCZ 12.1,DCZ 14.1, Dpix 530Z, DPix 740Z,DPix 750Z,DPix 820Z, DPix 1000Z,DPix 3200,DPix 3300, DPix 5100, DPix 5200, DPix 9000

Premier

DC67, DC68, DC87, DC593, DC6360, DM6365,DC6370, DC6371, DM7362, DM7365, DS7450, DSA350, ES6, SL4, SL5, SL8, SL53, SL58, SL63, SL68, SL83, SL86, SL1000

Ricoh

R1, R1S, R1V, R2, R2s, R3, R4, R5, R6, R7, R30, R40, R50, RR730, RR750

Rollei

CL 52, CL 55, Compactline 81, Compactline 90, CL 101, CL 102, CL 103, CL 110, CL 122, CL 130, CL 200, CL 202, CL 203, CL 230, CL 302, CL 312, CL 320, CL 350, CL 360TS, CL 370TS, CL 390SE, Compactline 412, Compactline 415, Compactline 424, Compactline 425, da8, da70, da80, da81, da100, da101, da120, da800, da1325, da6325, da7535, da8325, da8535, dr135, dr835, Flexline140, Flexline200, Powerflex 400, Powerflex 440, Powerflex 450, Powerflex 460, Powerflex 455, Powerflex 470, Powerflex 500, Powerflex 600, Powerflex 700HD, Sportsline 50, Sportsline 60, Sportsline 60 le, Sportsline 60Z, XS10

Samsung

CL5, D75, D860, *DV150F, DV300F, ES10, ES15, ES17, ES20, ES30, ES55, ES60, ES65, ES70, ES73, ES75, ES80, ES90, IT100, *M310, MV800, MV860, L60, L70, L77, L100, L201,L210, L301, L310W, L700, L730, L830, PL20, PL50, PL51, PL55, PL60, PL65, PL70, PL80, PL90, PL100, PL120, PL150, PL170, PL200, PL502, S760 , S1070, SH100, SL50, SL102, SL202, SL600, SL620, SL720, SL820, ST30, ST45, ST50, ST60, ST65, ST70, *ST72, ST77, ST80, ST88, ST90, ST93, ST95, ST96, ST500, ST550, ST700, ST6500, TL205, TL210, TL220, TL225, TL320, TL350, WB1000

Sanyo

DSC-E6, VPC-E7, VPC-E10, VPC-E60EX, VPC-E760, VPC-E870, VPC-E1000, VPC-E1075, VPC-E1090, VPC-E1290, VPC-S6, VPC-S7, VPC-S60EX, VPC-S70, VPC-S500, VPC-S600, VPC-S650, VPC-S670, VPC-S700, VPC-S750, VPC-S770, VPC-S870, VPC-S880, VPC-S1070, VPC-S1080, VPC-S1275, VPC-S1285, VPC-T700, VPC-T850, VPC-T1060, VPC-X1200, VPC-X1250, DSC-E7, DSC-S7, DSC-1200, DSC-X1250, DSC-X1260, VPC-W800

Sony

DSC-WX170, DSC-WX350, N1, N2, S2000, S2100, S650, S700, S730, S780, S930, S950, S980, W30, W35, W50, W55, W70, W80, W85, W90, W100, W110, W120, W130, W150, W170, W180, W190, W200, W210, W215, W220, W230, W270, W290, W300, W310, W320, W330, W350, W350D, W370, W380, W390, W510, W520, W530, W550, W560, W570, W570D, W610, W630, W690, W710, W730, WX1, WX5, WX7, WX9, WX10, WX30, WX50, WX60, WX70, WX80, WX170, WX200, WX220, WX350

Yashica

DC504, DC803, EZF10, EZF12W4XA, EZF12W4XL, EZF12W5XL, EZF524, EZF524MKII, EZF525, EZF527L, EZF531, EZF725, EZF824, EZF827, EZF924Z, EZF1027, EZF1027L, EZF1031, EZF1230, EZF1230L, EZF1231, EZF1233, EZ7032, EZ8032, EZF8035, EZF8321, EZTP-5, EZTP-9, EZTP-10, EZW-503A
